

# SINGER®

# Spool Knitter

## INSTRUCTION BOOK




### CAUTION

This product contains functional sharp points - for use under the direct supervision of an adult. Take extra care during unpacking, assembly and use.



### WARNING:

**CHOKING HAZARD** - Small parts.  
Not for Children under 3 years.

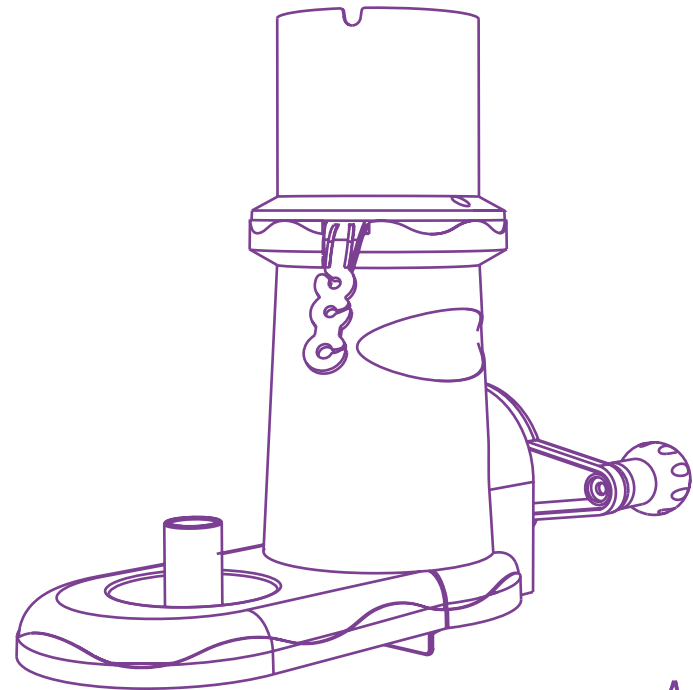


Ages 6+



## Troubleshooting

PROBLEM	CAUSE	SOLUTION
★ Missing stitches	<ul style="list-style-type: none"> <li>★ Turning the crank handle too fast</li> <li>★ Tension is loose</li> </ul>	<ul style="list-style-type: none"> <li>★ Turn the crank handle at approx. 2 ~ 2.5 seconds per turn</li> <li>★ Clip weight is not hung properly on the corded yarn</li> </ul>
★ Too many stitches on one needle	<ul style="list-style-type: none"> <li>★ Yarn is stuck in the machine</li> </ul>	<ul style="list-style-type: none"> <li>★ Push the knitted stitches from the bottom of the needle towards the back of the needle when the needle hooks onto the yarn</li> <li>★ Proper tension on the yarn and proper turning speed on the crank handle should be observed</li> </ul>
★ Unable to turn the crank handle	<ul style="list-style-type: none"> <li>★ The yarn feeding through the tension arm is tight</li> <li>★ The yarn is not feeding through the tension arm or the feeder correctly</li> <li>★ Yarn may be too thick</li> </ul>	<ul style="list-style-type: none"> <li>★ Ensure the spool of yarn is not hindered by any object</li> <li>★ Refer to spool knitter diagram on Page 1</li> <li>★ Do not use worsted weight or heavy yarn. Always use lightweight yarns</li> <li>★ If changing yarn, make sure that the diameter of the knot is less than 2.5mm</li> </ul>

## Items Included in the Set

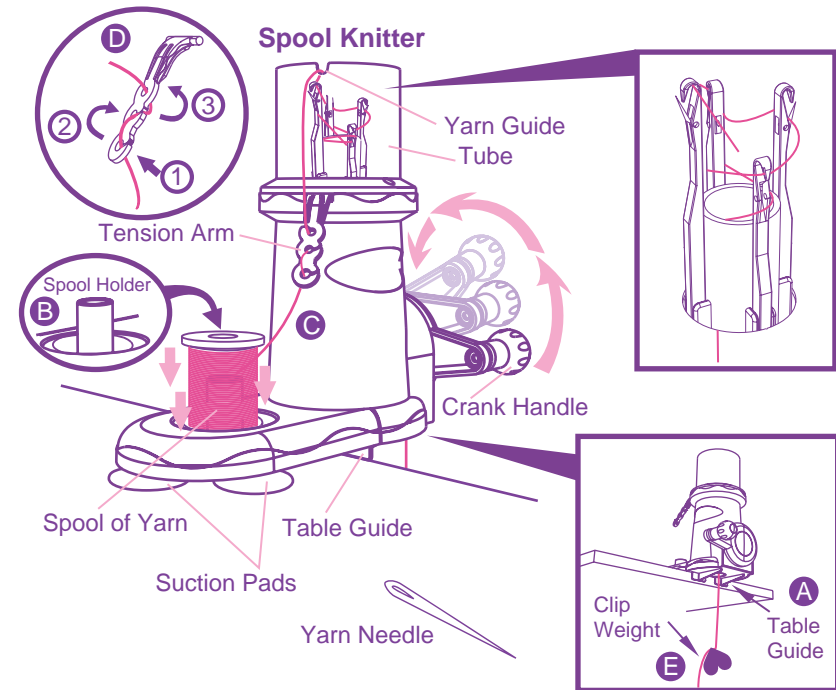



### SETTING UP (Refer to diagram above)

1. Place the table guide against the edge of the table and press down the suction pads onto the table to secure the spool knitter. Diagram **A**
- TIPS:** For weak suction support, add scotch tape to the sides of the spool holder, holding onto the table.
2. Place the spool of yarn on the spool holder. Diagram **B**
  3. Pull a length of yarn and thread it through the tube and allow the yarn to rest on the yarn guide at top. Diagram **C**
  4. Thread the resting yarn through the tension arm. Diagram **D**
  5. Attach the clip weight to the end of the yarn and hold the yarn at the top so it does not slip. Diagram **E**


## Working the Yarn

- Turn the handle slowly in a clockwise direction until the first needle catches the yarn.


TIPS: All latches must be open.

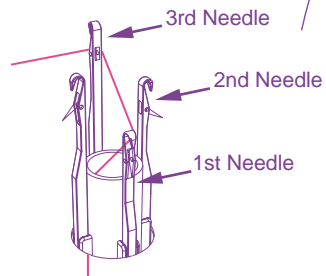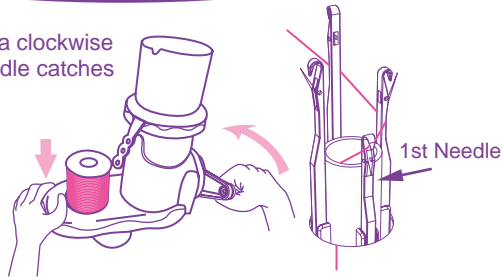

- Push the yarn behind the second needle to skip it and continue to turn the handle slowly until the third needle catches the yarn.

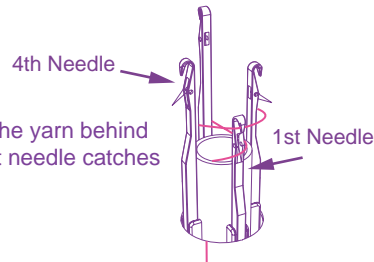

- Continue to turn the handle and push the yarn behind the fourth needle to skip it until the first needle catches the yarn again.

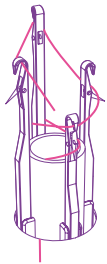


- Let go of the yarn and continue to turn the handle slowly to allow all the needles to catch the yarn one by one.

- Continue to turn the handle and soon the corded yarn will come out of the bottom of the tub.
- Move the clip weight up as needed.

Note: The needle should only hold one loop at all times.

## Binding Off

- Holding the corded yarn at the bottom, cut the yarn at the yarn guide.

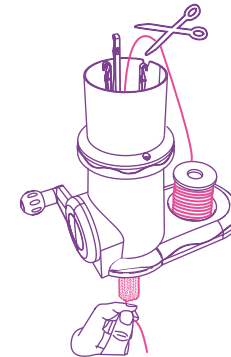

\*Scissors not included.

- Keep turning the crank handle until the cording is released from all four needles.
- To close the open cord, weave the end of the cut yarn into the yarn needle and thread it through all four loose stitches.



- Remove the yarn needle and pull the yarn to tighten and close.
- Weave the end of the yarn into the cord.