


Puzzle Anything! Jigsaw Maker

Instructions

PUZZLE JIGSAW MAKER PARTS

In order to have a perfect puzzle piece and not odd shape, these sizes of paper are suggested to be used:
4" by 6" Adhesive Foam Boards
5" by 7" Adhesive Foam Boards

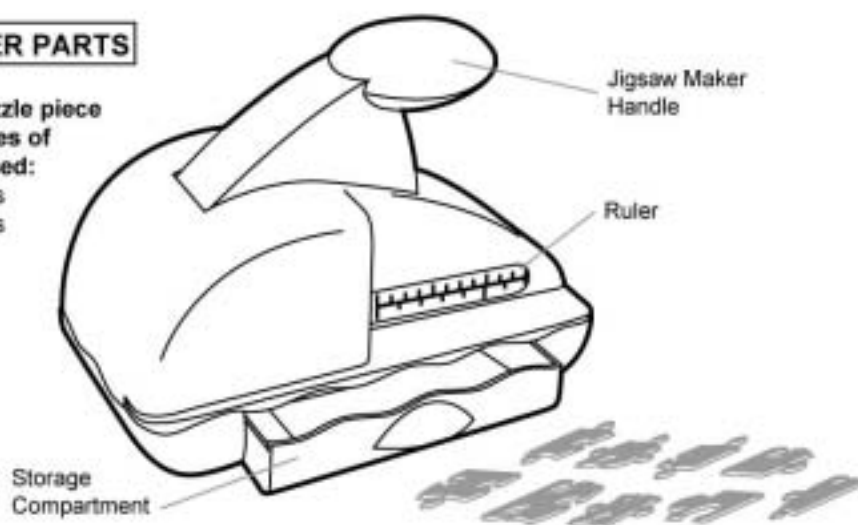

HOW TO MAKE A JIGSAW PUZZLE

1. Peel off adhesive sheet from foam board.



2. Take the print you have chosen and stick it to the foam board.



3. Gently insert puzzle paper into the Jigsaw Maker as shown. Press down the Jigsaw Maker handle to stamp your first puzzle. Slide the puzzle paper towards the left until it hits the edge and stamp again. Continue doing this step until the first row is cut.



4. After you have completed the first row, re-position your puzzle paper into the Jigsaw Maker as shown. And follow step 3 until the puzzle paper is completely cut into puzzle shapes.



5. Now your puzzle is ready to play with! Share it with your friends and family!
Makes a great gift!



Hints:
Continue cutting your puzzle paper row by row. DO NOT rotate paper after completing a row. Empty your storage compartment after cutting your third row to free up the space. To ensure a beautiful puzzle piece, your puzzle paper must be in inches.



WARNING:
CHOKING HAZARD - Small parts.
Not for Children under 3 years.