


1



- Unfold tent onto a clean/even surface
- Dépliez la tente sur une surface propre / uniforme
- Despliegue la carpa sobre una superficie limpia y uniforme

2

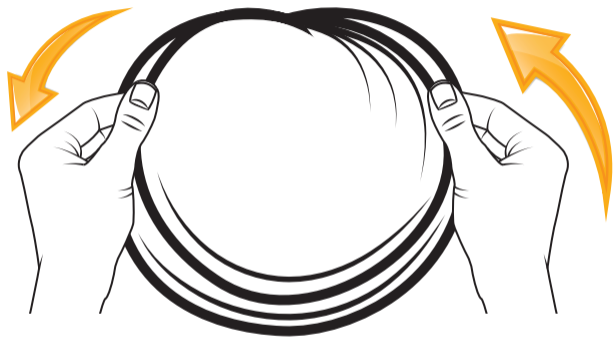