



54-KEY ELECTRONIC KEYBOARD™



If you have questions or difficulty operating this toy  
**DO NOT RETURN IT TO THE STORE**  
**Call us Toll-Free: 888-656-5869**  
**Monday - Friday between 10:00am - 4:00 pm Pacific Standard Time**  
**or email us at: customerservice@nkok.com**

**WARNING:**  
**CHOKING HAZARD – Small parts.**  
**Not for children under 3 years.**

Conforms to ASTM F963 standard.  
Retain the packaging and manual for future reference as they contain important information.

4. Chord Accompaniment Function (Picture 9)

(1) Single-finger Chord

Press any of the 8, “16 Rhythms” buttons to begin, press the [Single-fingered Chord] button **A**, then press any key on the Accompaniment keyboard area (See Picture 10). The electronic keyboard will produce an orchestrated accompaniment. Press once again the [Single-fingered Chord] button and the Single-fingered Chord Accompaniment will stop.

(2) Multi-finger Chord

Press any of the 8, “16 Rhythms” buttons to begin, press the [Multi-fingered Chord] button **B**, now press the keys “C+E+G” or “G+B+D” at the same time on the Accompaniment keyboard area (See Picture 10) and you can make Multi-fingered Chor Accompaniment. Press once again the [Multi-fingered Chord] button and the Multi-fingered Chord Accompaniment will stop.

5. Song Demos (Picture 11)

(1) Demo One

Press this button **A** and the electronic keyboard will play one piece of music. Press this button again to skip to the next song. Press the volume adjusting buttons [ + ] or [ - ] **D** to adjust the volume during song demo. Press the “STOP” button **C** to switch off the playing.

(2) Demo All

Press this button **D** and the electronic keyboard will play all the music included. Press the volume adjusting buttons [ + ] or [ - ] **D** to adjust the volume during song demo. Press the “STOP” button **C** to switch off the playing.

6. Recording/Playback Function (Picture 12)


(1) Press the [REC] button **A**, the screen will show the letters “RE”. Press any of the Black & White keys to start recording your own songs. When the note is fully recorded, the following keys will all make the same sound and the recording function will be stopped. If you continue pressing the keys then it will simply make pronunciation and won’t store it. Press the [PLAY] button **B**, the screen will show the letter “RP”, indicating you can playback the songs you have recorded. You can also change the Timbre as well. If you want to repeat listening, press the [PLAY] button **B** again.

(2) If you press once again the [REC] button **A**, the note you have played won’t be stored and a new recording will begin.

7. Play-Along Function (Picture 13)

Press the [PLAY-ALONG] button **A**, the screen will show the word “OE”. It will play a short melody. At this time you can study the song that is playing according to its melody. Press any combination of keys to play-along to that song. You can skip to the next song by pressing the “Play-Along” button again. Press the “STOP” button to exit Play-Along mode. Altogether there are 40 melodies to choose from.

(Picture 9)

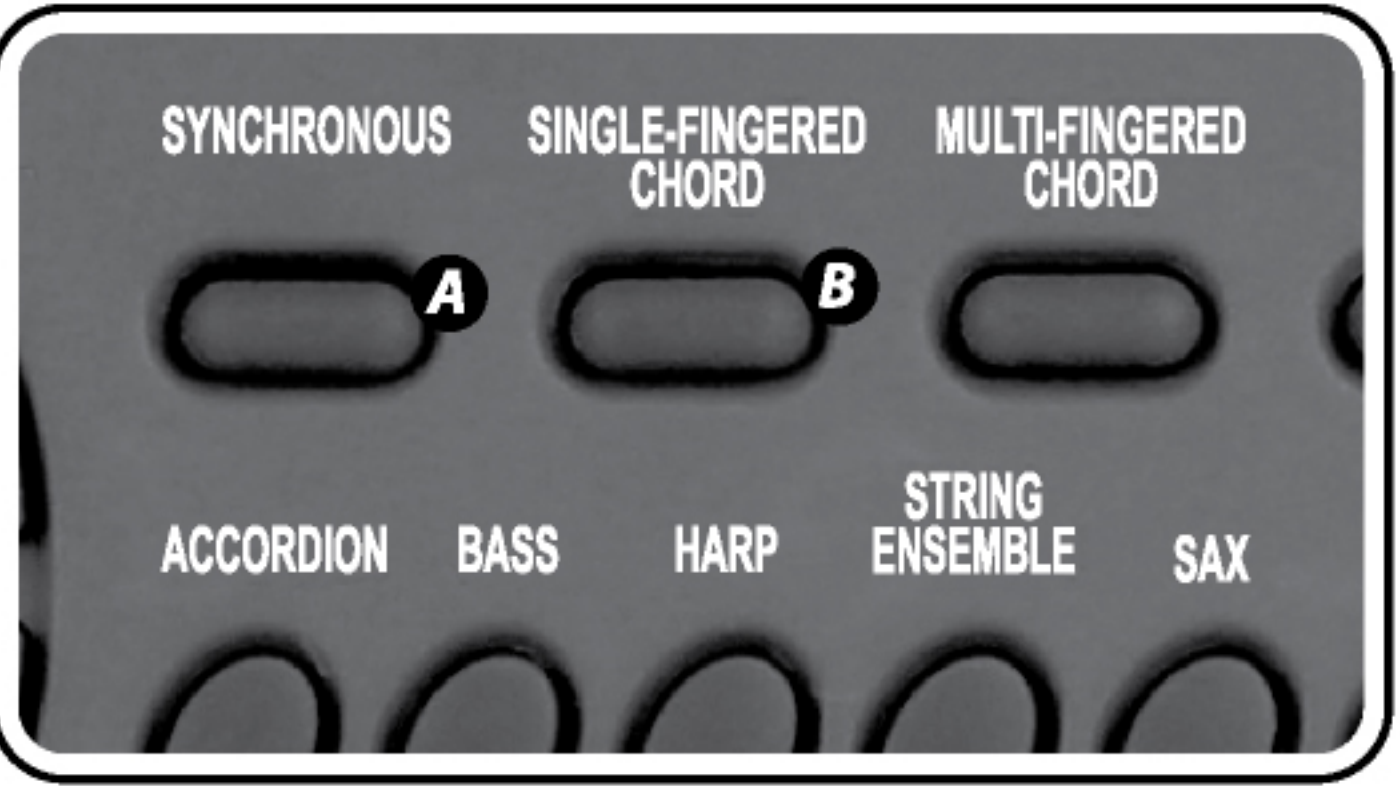


(Picture 10)




Accompaniment Keyboard Area

 (Picture 11)

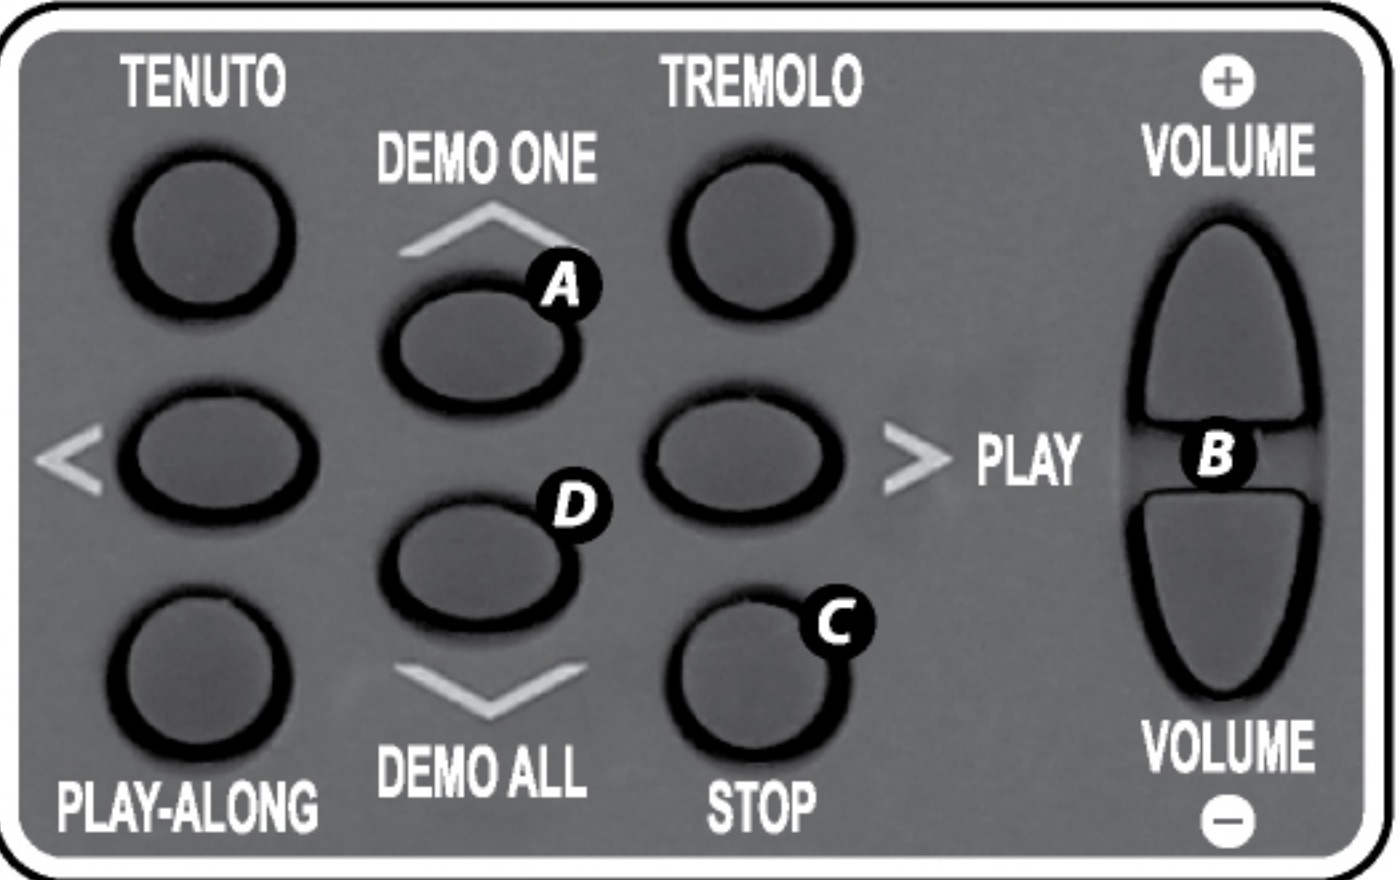

(Picture 12)

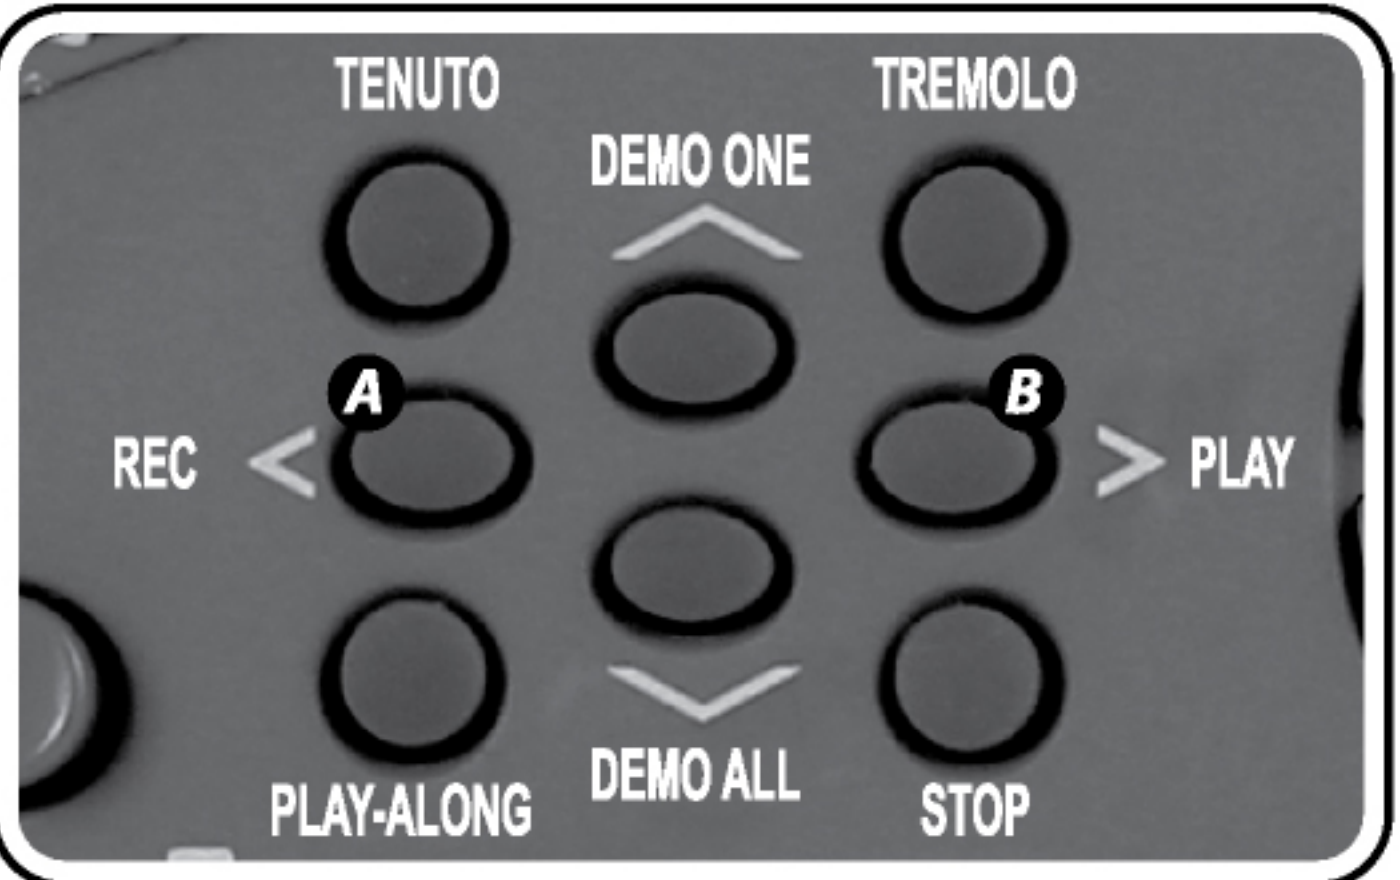 

(Picture 13)



 
Please read carefully before using.

- Only use the included power adapter. If the adapter is damaged, please replace it immediately.
- Do not disassemble, repair or modify the product.
- Should an abnormality occur in the product, immediately turn the power OFF, disconnect the power-supply cord plug
- The product should be serviced by qualified service personnel only!
- Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and/or damage to other devices.
- Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage: Direct sunlight, extreme temperature or humidity, excessive dusty or dirty location, strong vibrations, shocks or close to magnetic fields or interference with other electrical devices. Radios and televisions placed nearby may experience reception interference.
- Operate this unit at a suitable distance from radios and televisions.
- Unplug the power adapter first before cleaning.
- Clean only with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths that may damage the surface of the product.
- Entry of water, needles or hair pins may result in breakdown or short-circuit.

WARNING:

- To prevent electric shock, match wide blade of plug to wide slot, fully insert.
- Do not insert or disconnect the power cord plug with wet hands.
- Do not play at high volume for long periods of time. Doing so may cause hearing discomfort.

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

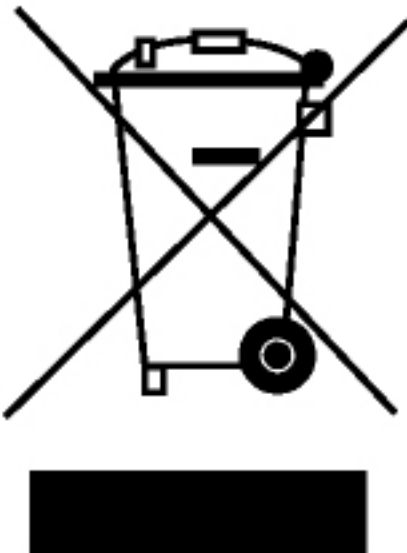

©2021 NKOK, Inc. Irwindale, CA 91706, USA.  
www.nkok.com - customerservice@nkok.com  
Made in China. Fabriqué en Chine. Hecho en China.  
AVC5208-071921-V1.1

 


Includes

54-Key Electronic Keyboard™



Operating Instructions

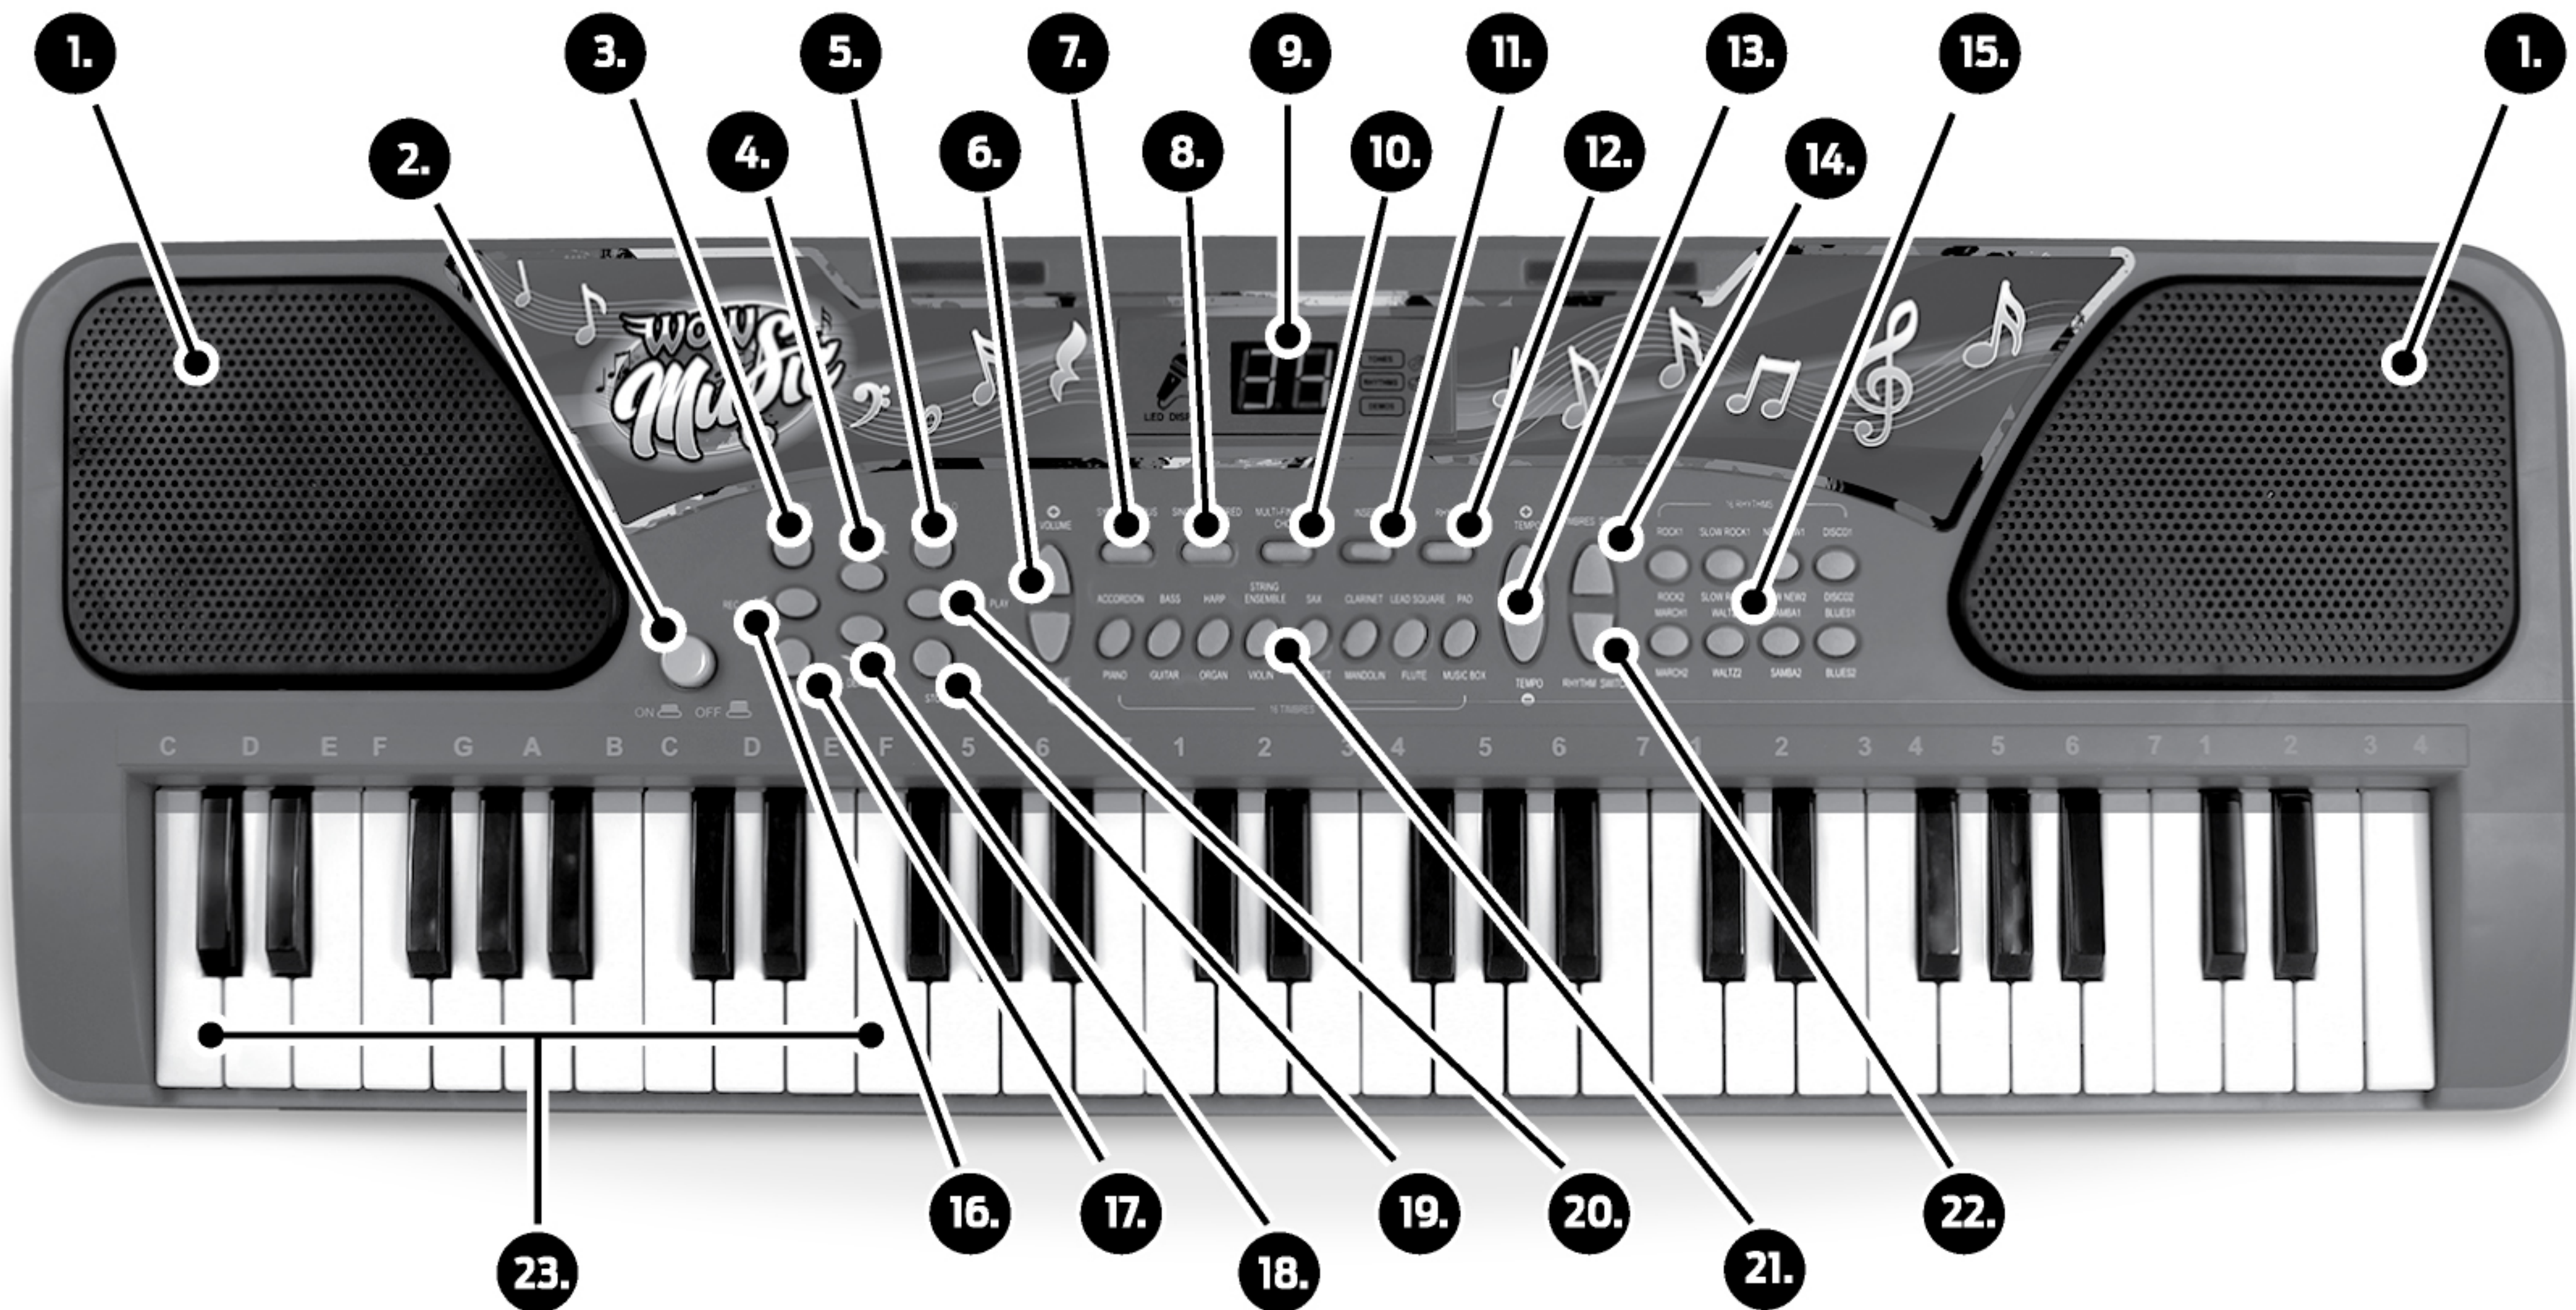

Function Name and Distribution


- |                  |                          |                          |                      |                |                                 |
|------------------|--------------------------|--------------------------|----------------------|----------------|---------------------------------|
| 1. Speakers      | 5. Tremolo               | 9. Digital Screen        | 13. Tempo +/-        | 17. Play-Along | 21. Timbres Selection           |
| 2. ON/OFF Switch | 6. Volume Control        | 10. Multi-fingered chord | 14. Timbres Switch   | 18. Demo All   | 22. Rhythm Switch               |
| 3. Tenuto        | 7. Synchronous           | 11. Insert               | 15. Rhythm Selection | 19. Stop       | 23. Accompaniment Keyboard Area |
| 4. Demo One      | 8. Single-fingered chord | 12. Rhythm               | 16. REC              | 20. Play       |                                 |

Preparation Before Playing. Battery Installation

You can power the unit either by Batteries or by Power Adapter. Follow the instructions described below.

1. Using Batteries

 1. Locate and open the battery compartment cover located on the bottom of the Keyboard.
2. Remove screw to lift cover.
3. Insert 6 x 1.5V AA/LR6/R6 batteries (Not Included). Carefully follow the polarity markings on the Keyboard.
4. Replace the compartment cover, making sure that it locks firmly in place with screw.

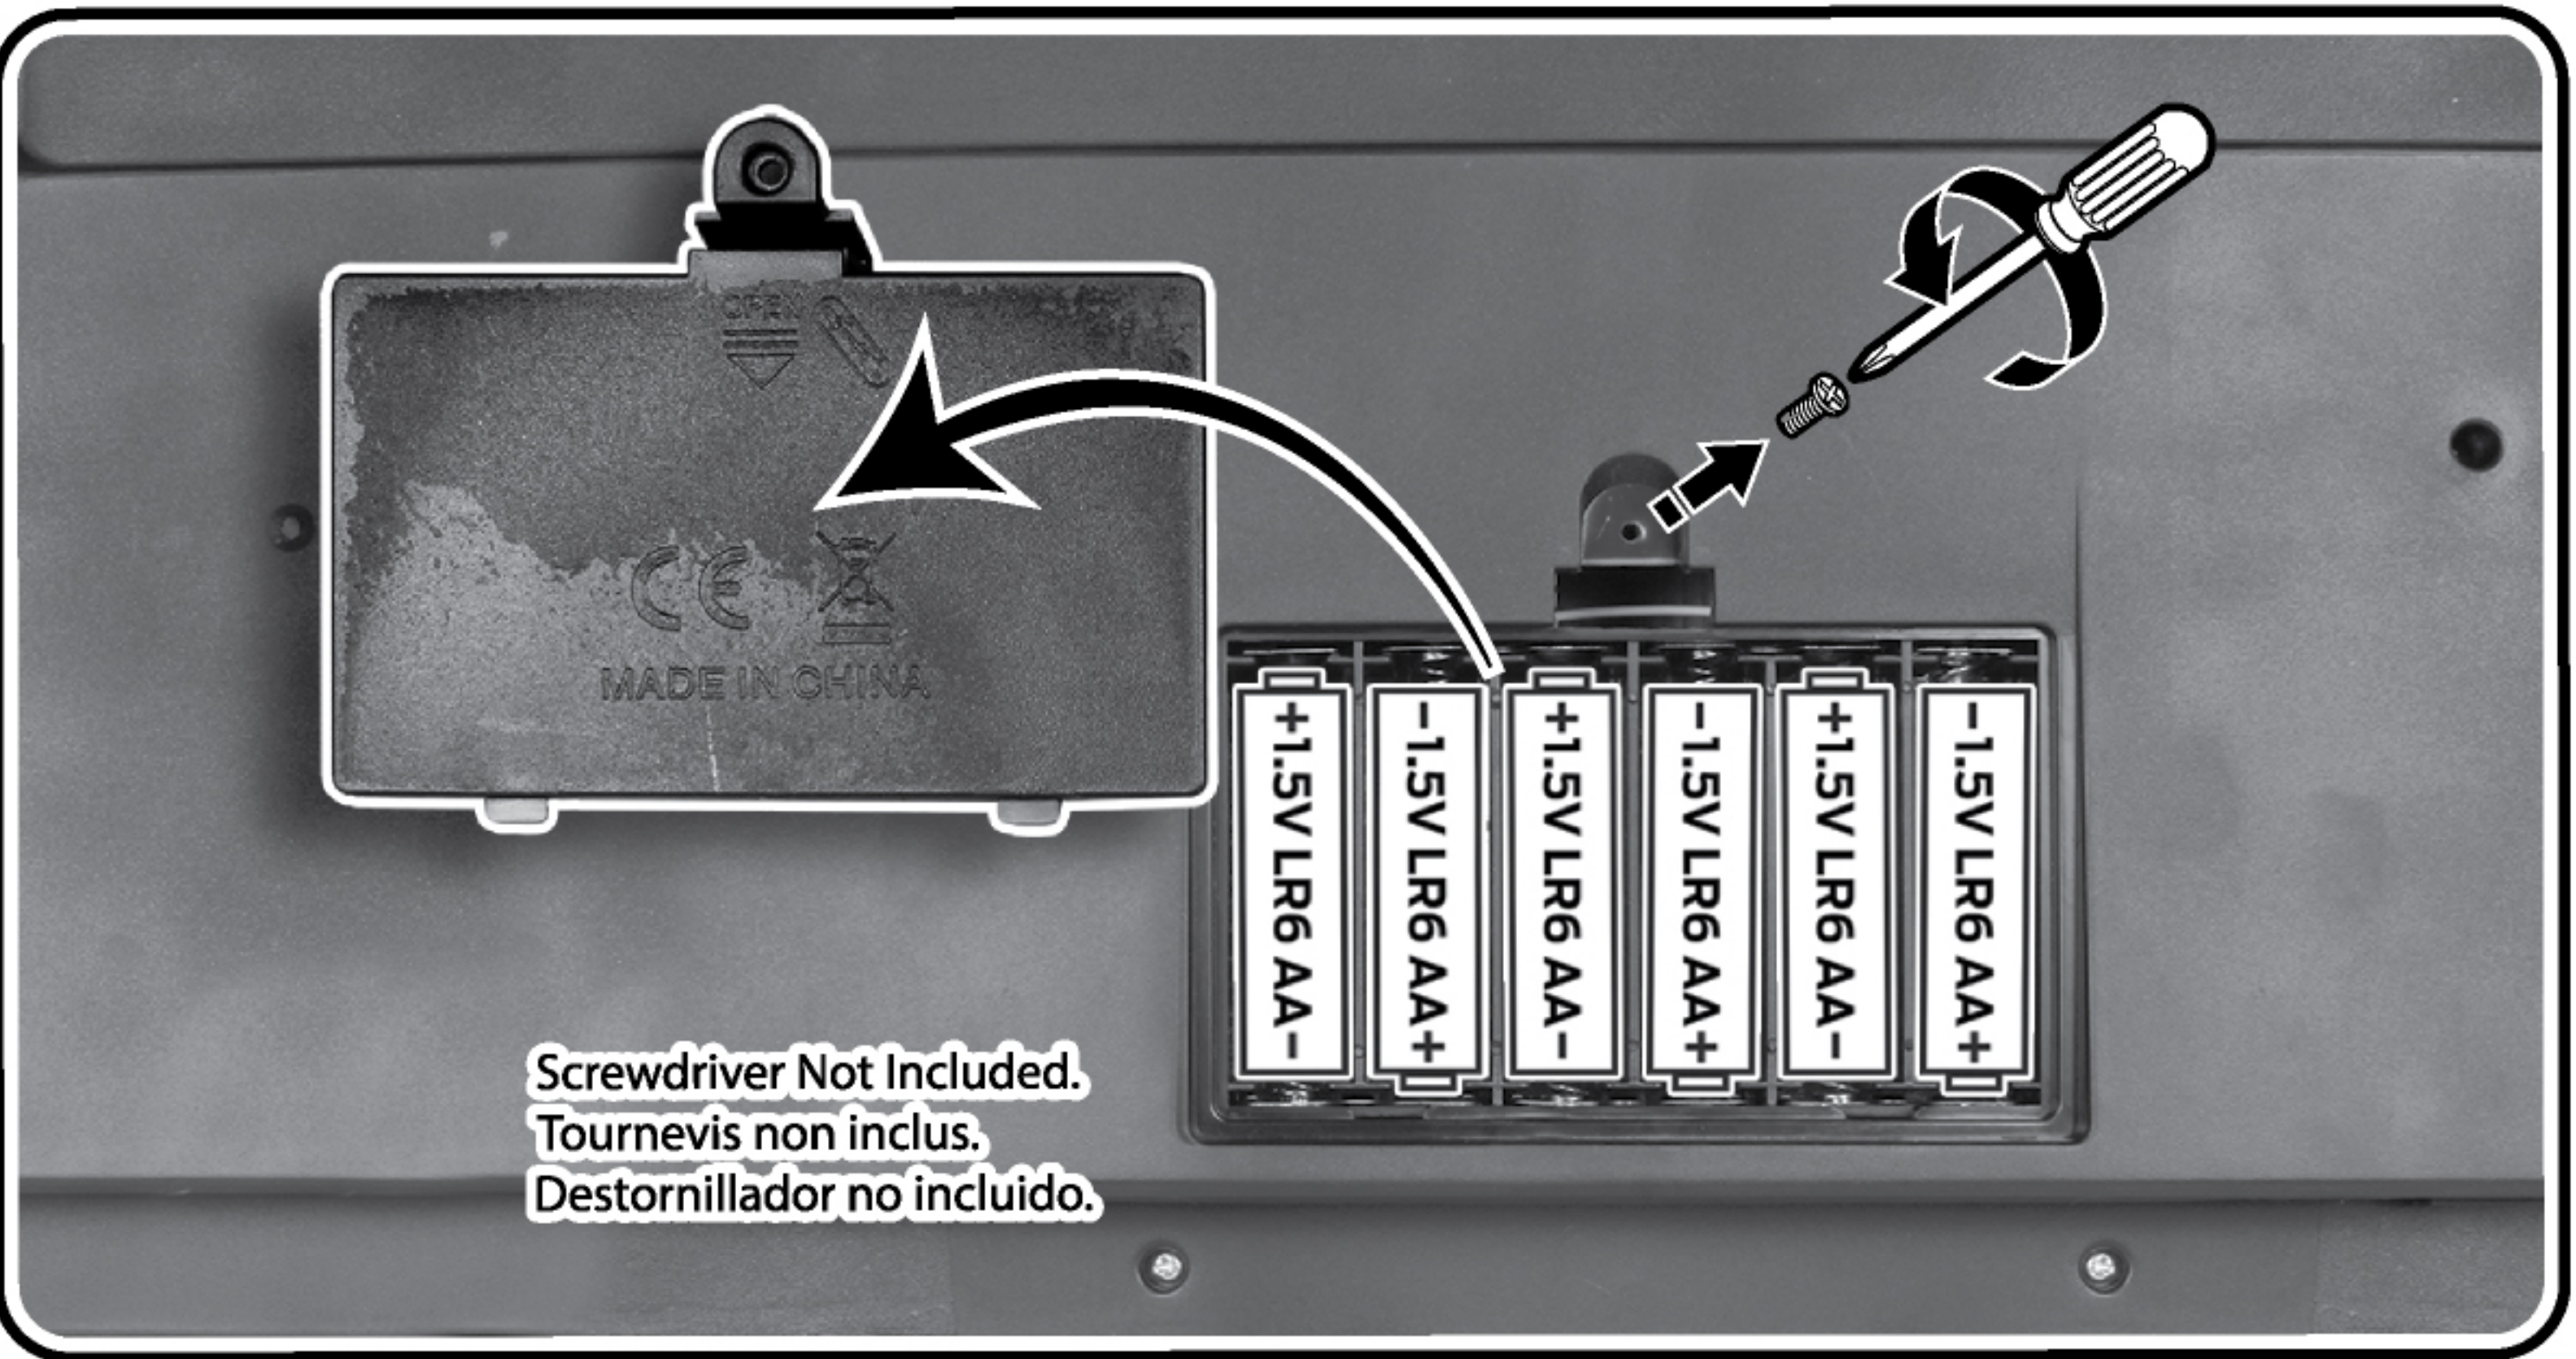

GENERAL BATTERY SAFETY INFORMATION

Read and follow operating instructions.

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. Batteries are to be inserted with the correct polarity.
5. Exhausted batteries are to be removed from the product.
6. The supply terminals are not to be short-circuited.
7. Non-rechargeable batteries are not to be recharged.
8. Rechargeable batteries are to be removed from the product before being charged.
9. Rechargeable batteries are only to be charged by an adult.
10. Dispose of battery(ies) safely.
11. Do not dispose of this product in a fire. The batteries inside may explode or leak.
12. Batteries should be changed by adults only.

Caution:

Always remove the batteries from the unit when it is not being used for an extended period of time.

2. Using Power Adapter

1. Connect the included power adapter to the power supply jack **A** on the back of the Electronic Keyboard. **(Picture 1)**
2. Plug the Power Adapter into an AC outlet.
3. Turn the power ON.


Note:

When the keyboard is not in use, please disconnect the power. Please make sure the Electronic Keyboard is turned OFF before disconnecting the Power Adapter. This will automatically cut off the power supply.

3. Microphone/external speaker is required.

1. Insert the microphone into the corresponding socket **B**, now you are ready to sing while playing. **(Picture 1)**
2. Plug the speaker/smart device into the corresponding output socket **C**. **(Picture 1)**

**(Picture 1)**

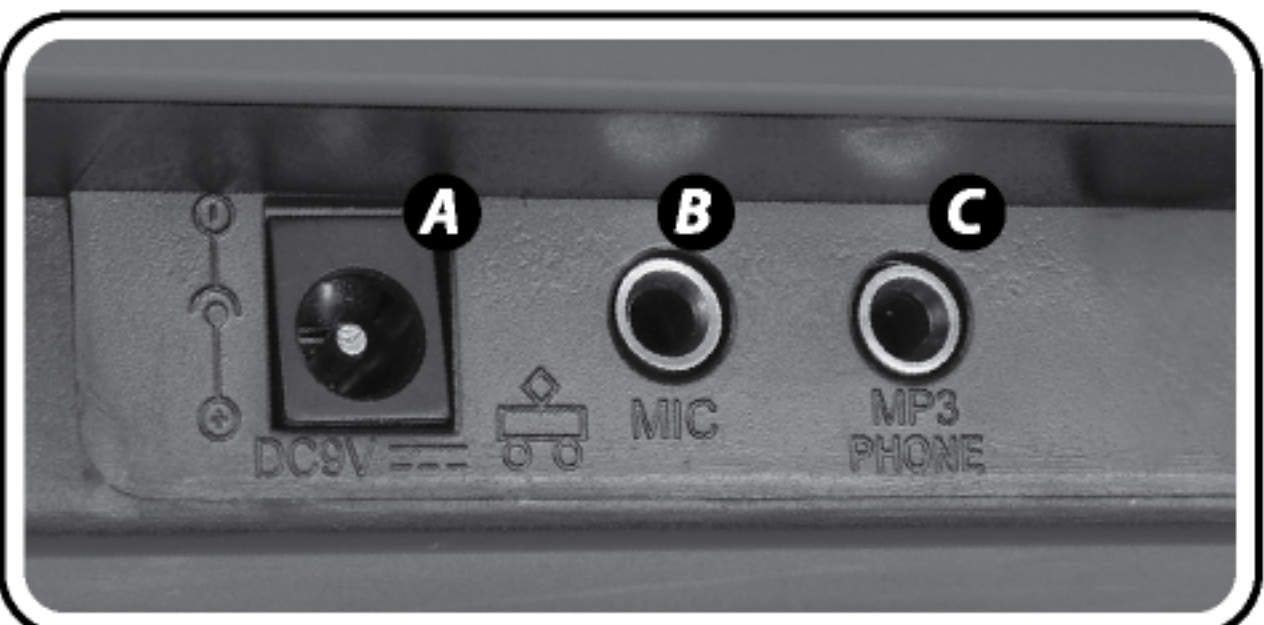

Basic Playing Method

Press the [ON/OFF] button, the screen display will show the number “01”, the overall machine will enter into Ready State. Press the Volume Adjustment buttons [+] or [-] to adjust the volume. The default volume level starts at 9. Altogether there are 15 levels available for adjusting.

1. Timbres playing **(Picture 2)**

Press any of the 8, “16 Timbres” buttons **A** to play that musical instruments sounds. (1) You can change the Timbres on the keyboard one by one accordingly by pressing the “Timbres Switch” button **B**. Altogether there are 16 Timbres.

2. Sound Effect Control

(1) Tenuto: **(Picture 3)**

Begin by pressing the [ON/OFF] button to reset the Keyboard, then press the [TENUTO] button **A**. Tenuto Function is now active and the screen will show the number “01”. The Tenuto effect can be produced immediately in the Electronic Keyboard. Press once again the [TENUTO] button, the Tenuto function will turn off.

(2) Tremolo: **(Picture 3)**

Press the [TREMOLO] button **B**, the Tremolo function is now active and the screen shows the number “01”. The Tremolo effect can be produced immediately in the Electronic Keyboard. Press once again the [TREMOLO] button, the Tremolo function will turn off.

3. Rhythm Selection **(Picture 4)**

Press any of the 8 “16 Rhythms” buttons **A** to play different Rhythm sounds.

- (1) You can change the Rhythm on the keyboard from the first set of 8 Rhythms to the second set by pressing the “Rhythm Switch” button **B**. Now try clicking on one of the “16 Rhythms”. Altogether there are 16 Rhythms.

(2) Synchronization Function **(Picture 5)**

- {1}** Press [Synchronous] button **A**, the screen will show the number “01”. This time press any of the Black & White keys on the Accompaniment keyboard area **(See Picture 6)** the rhythm and playing will be in sync.
- {2}** Press [Synchronous] button, the screen will show the number “01” and press once again the [Single-Fingered Chord] **B** or [Multi-Fingered Chord] button **C**, this time press any key on the Accompaniment keyboard area, the rhythm and chord and playing will make synchronous starting.
- {3}** Press the [Synchronous] button once more, the screen display will show number “01”, the Synchronization function is OFF.


(3) Tempo Speed Adjusting **(Picture 7)**

The Tempo Speed is defaulted approximately at 100 beats per minute. Press the “TEMPO” Speed Button [+] or [-] **A**, you can speed up or slow down the speed. The Tempo Speed can be adjusted from 73 beats per minute to 117 per minute, there are 20 levels altogether.


(4) Inserting Function: **(Picture 8)**

When the rhythm is playing, press [Insert] **A** button, one section of the interludes will be inserted into the original rhythm and then shift to the original normal rhythm.

 
**(Picture 8)**

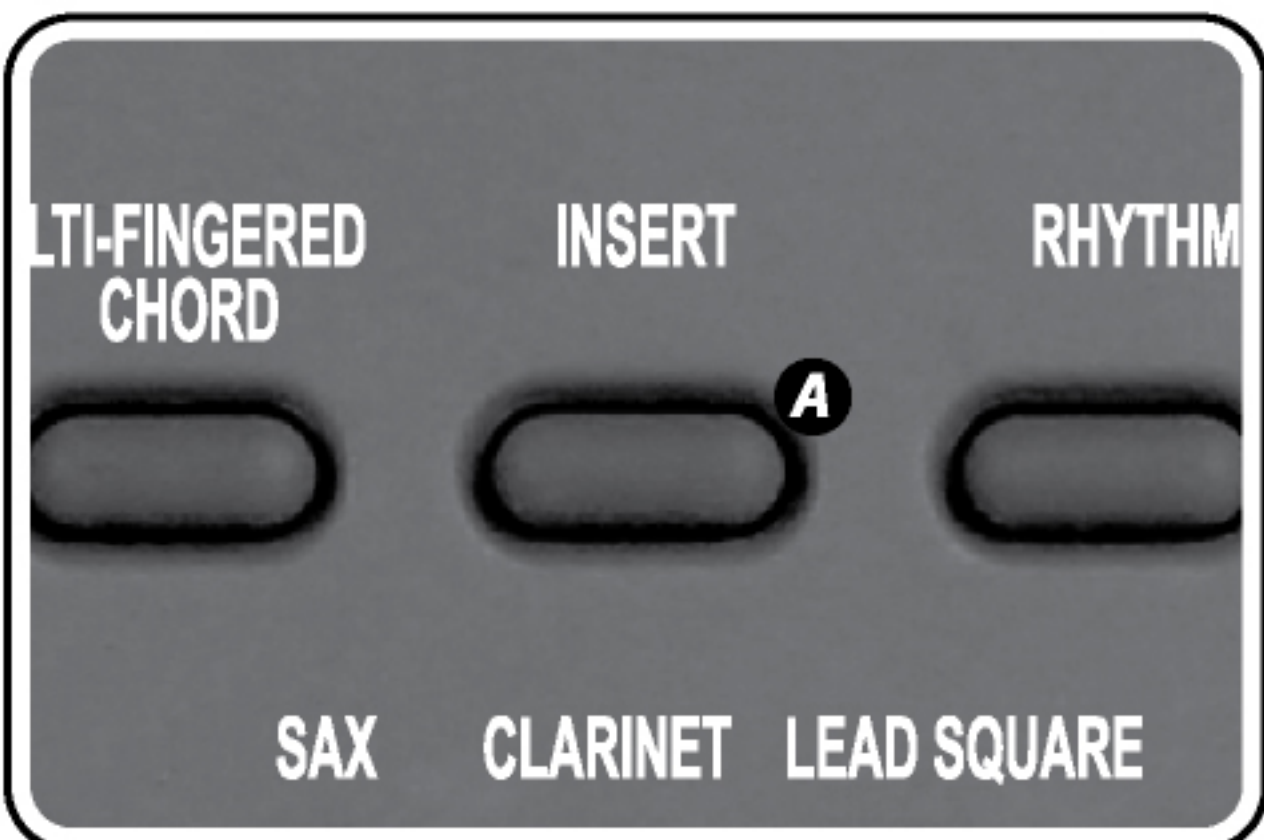


**(Picture 7)**

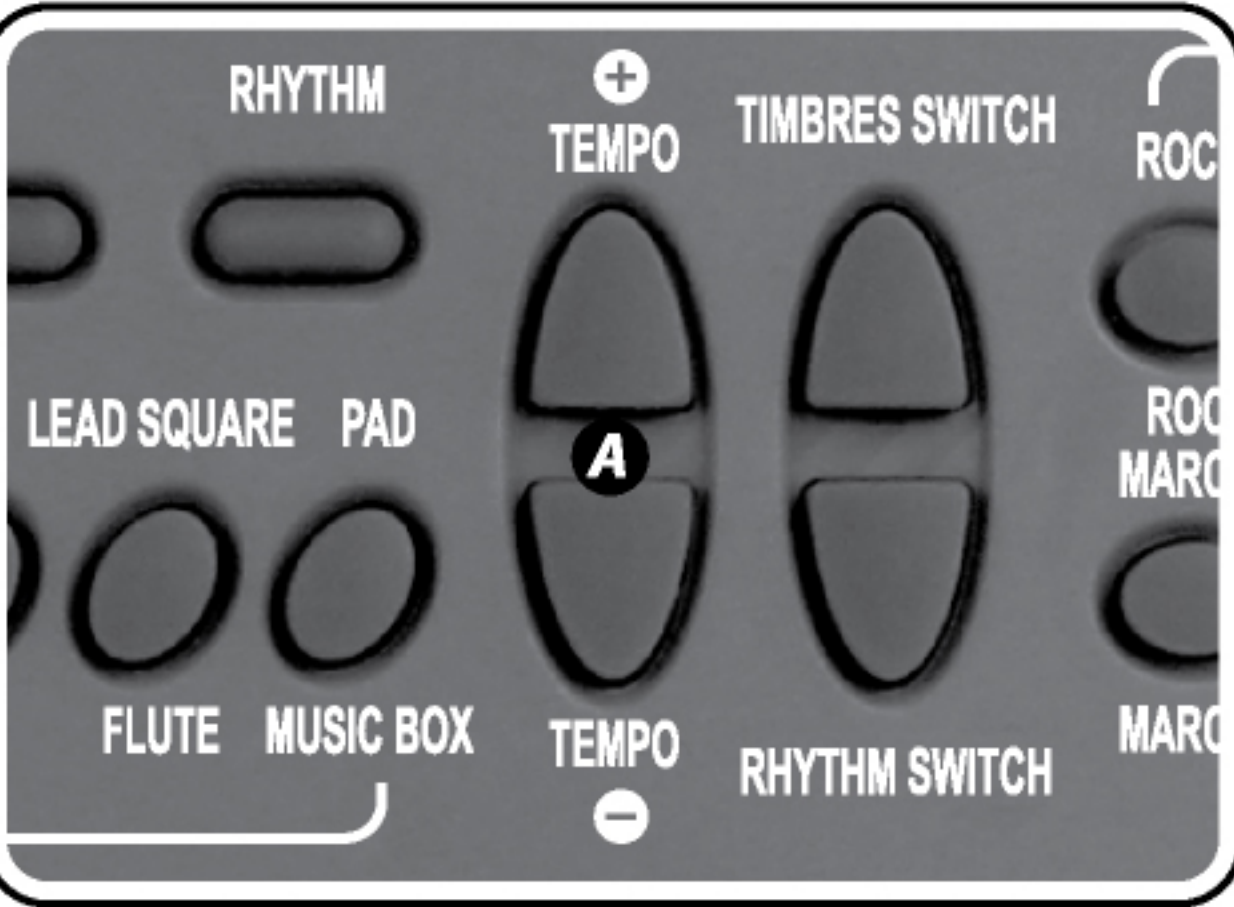 


**(Picture 2)**

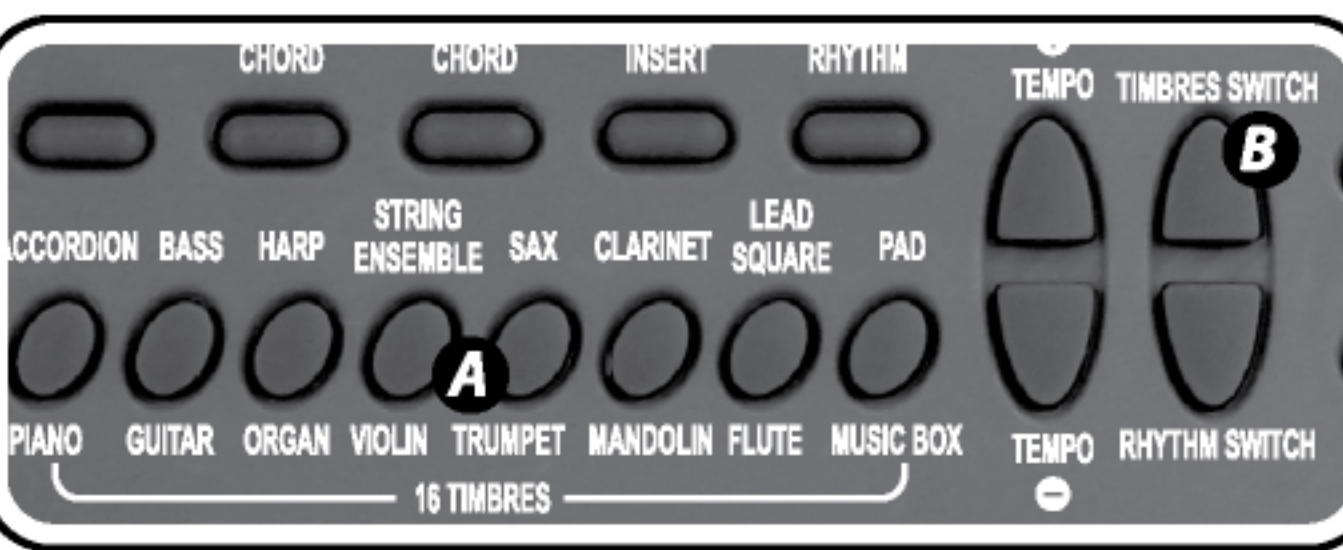 


**(Picture 3)**

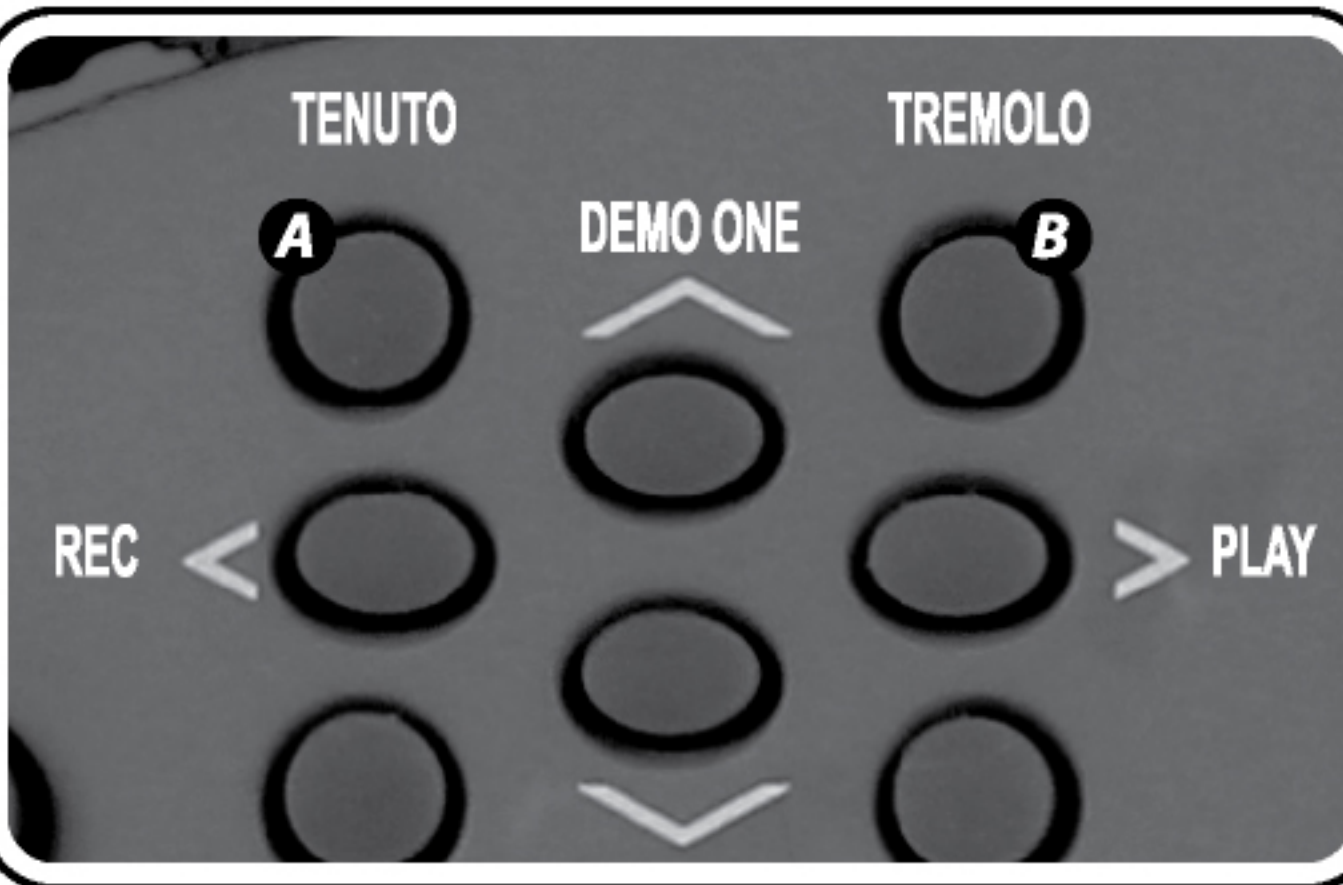 

**(Picture 4)**

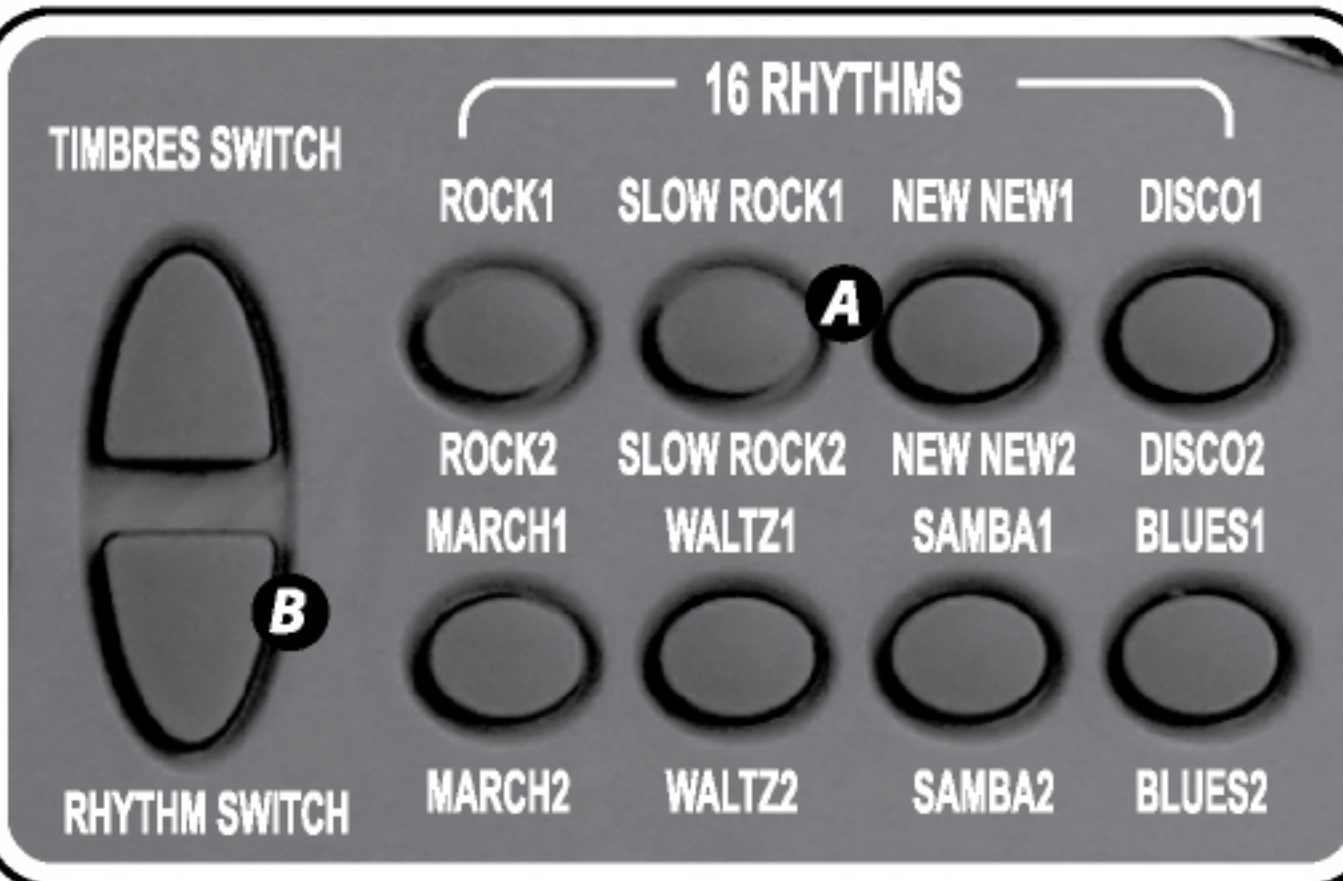 

**(Picture 5)**

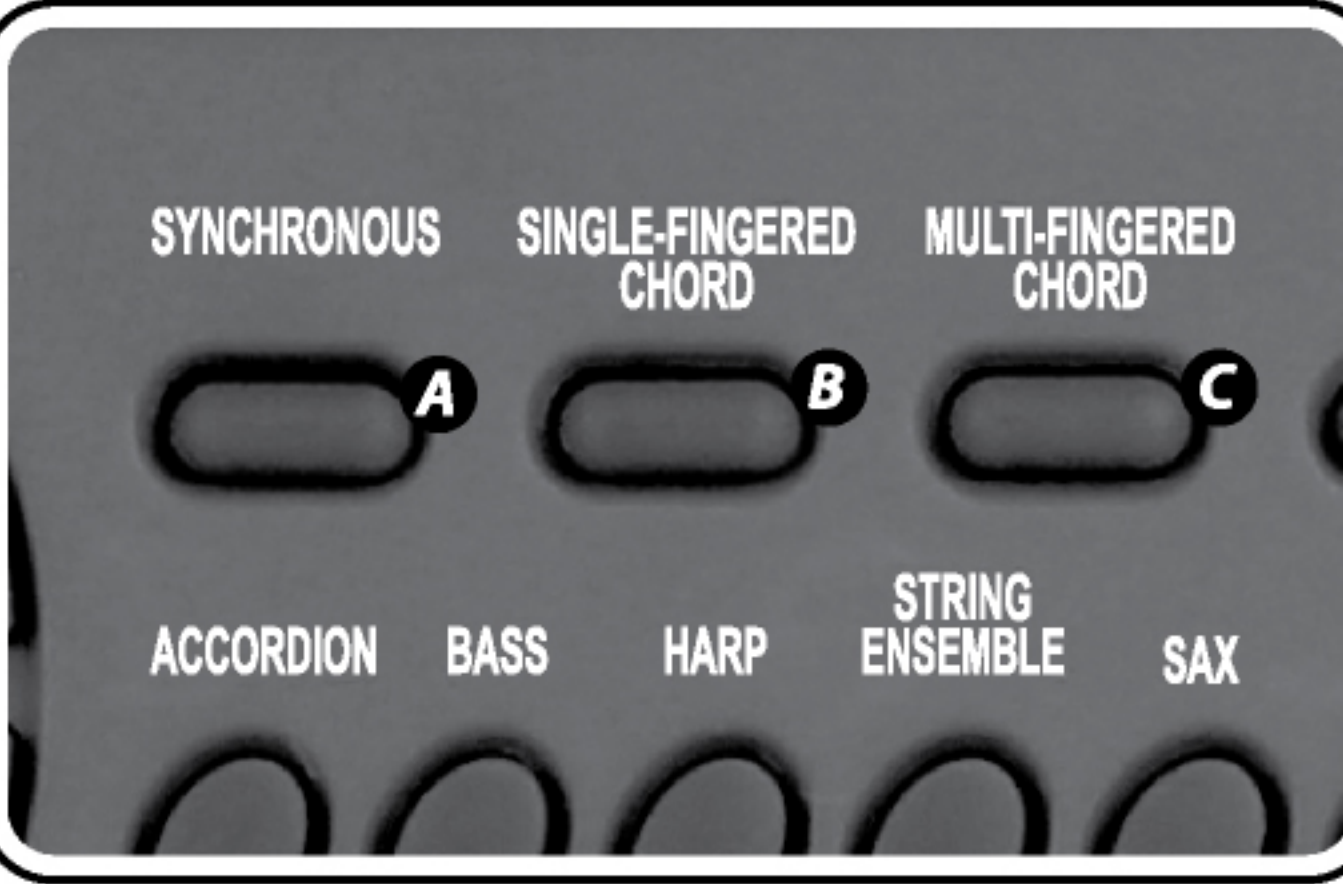 

**(Picture 6)**



Accompaniment Keyboard Area